


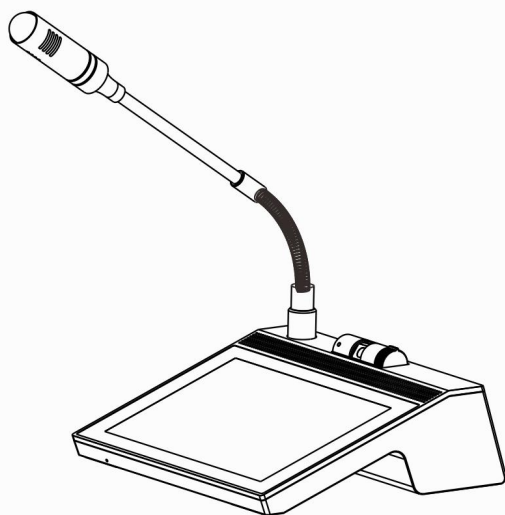


IP PAGING CONSOLE

Installation Manual




Description of Interface

【Front】

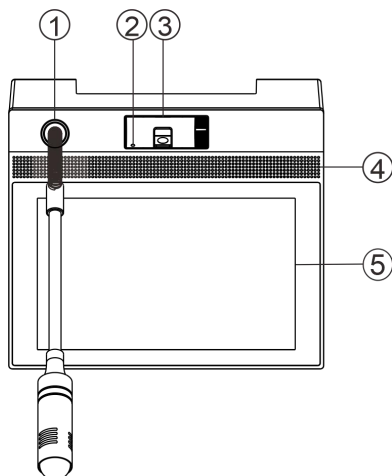


- ① Gooseneck Microphone Socket: Inset the gooseneck to collect the intercom audio.
- ② Indicator light: Light up during video intercom
- ③ Camera
- ④ Loudspeaker
- ⑤ Touch Screen


【Back】

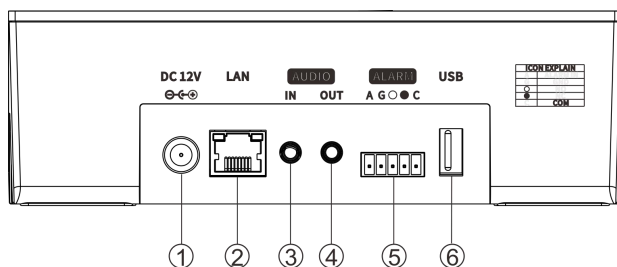

- ① Power supply : DC12V/1.5A.
- ② RJ45 Network port: Connect to Ethernet switch, or POE switch.
- ③ Line in : Used for connecting microphone, mobile phone, computer.
- ④ Line out : Used for connecting active speaker or amplifier.
- ⑤ Alarm In and alarm output interface
- ⑥ USB interface :Used for insert USB.

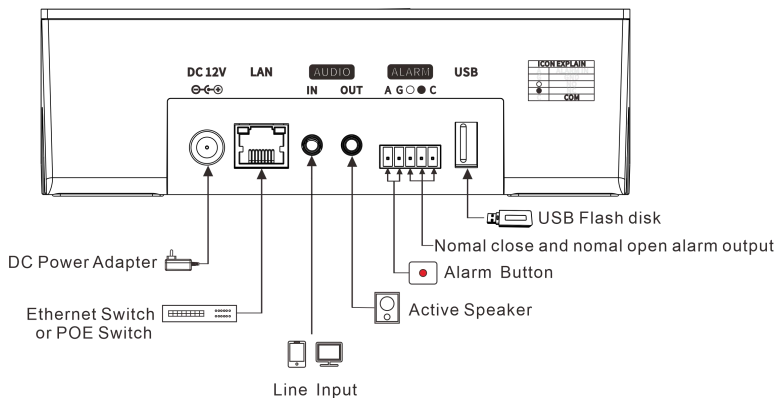

Dimension (unit:mm)

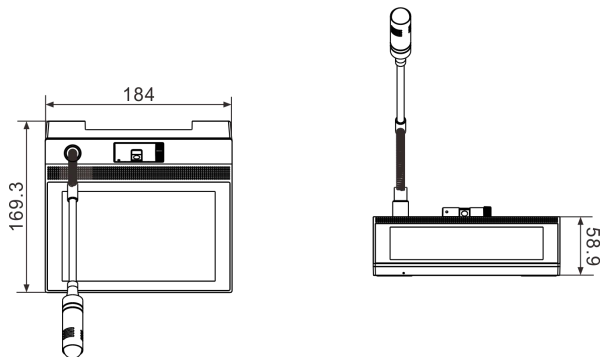

Specifications

Power supply and Stand-by power consumption	DC12V/1.5A , ≤10W
POE	IEEE802.3AT/AF
Network protocol	TCP/IP、UDP、ARP、ICMP、IGMP、HTTP
Network transmission rate	100Mbps
Audio encode	MP3/PCM/ADPCM
Audio sampling rate、Bit Rate	8Khz-44.1Khz,16bit,8Kbps-320kbps
Video transmission bit rate	512Kbps-4Mbps
Camera Pixels	200million
Video Encode	VGA/720P/1080P
Built-in amplifier	3W
S/N, Frequency response	>82dB、40Hz-18KHz

Screen	7 inch touch color LCD screen
Resolution	800*1280
Language	Chinese
Interface	1 RJ45 port、1 alarm in、1 alarm out、1 line in、1 line out、1 USB port、1 power input.
Working temperature and humidity	0-45℃, ≤90%(no condensation)
Dimension	183.9x169.0x58.4mm

Fault Exclude

Phenomenon	Reason and Fault Exclude	
Terminal can not login to the server?	1. Check the server software and main control computer is normally open or not. It must close all the firewall before open the service software(including the systemic firewall and other antivirus software). 2. Check the network connection is normally working or not. 3. Check the terminal IP setting. Checking the terminal ID No., server IP, local IP and gateway IP these parameters is correct or not.	
How to change login password of web page?	1. Log into the web interface, go to "Advanced Setting" » "Security Setting". 2. Input the original password in current password column. 3. Input the new password in new password column. 4. Confirm the new password. 5. Go to "System settings" » "System Tools" » "Reboot Terminal" to reboot the device for the new password settings to take effect.	
Mic pole light not on when intercom or broadcast?	1. whether the PTT intercom key is pressed in the intercom. 2. check the web page broadcast settings whether the input channel is set to line input, if so, need to modify to gooseneck microphone lever. 3. Check the web page to see if the intercom settings set the input channel to line input, if yes, need to modify to gooseneck microphone lever.	
Failed to initiate an offline intercom?	1. If you use the dial pad to initiate an offline call, please check whether the target terminal input format is correct (must be ID@IP), and if the other party's port is not the default 5060, the format should be changed to ID@IP:port. 2. The other terminal does not support offline intercom.	

Packing List



Microphone 1 pcs
(IM-320B)



Terminal connector
1pcs(3. 5-5P)



Certification 1pcs



Quick Install
Manual 1pcs



Wechat

SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice



VI. 0B240315