SPON

INTERCOM PANEL
Installation Instructions

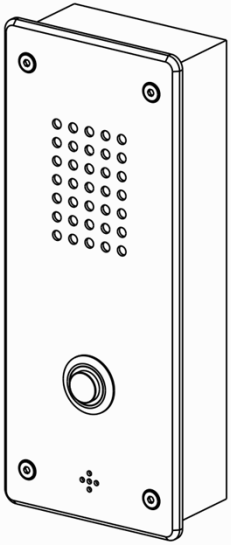

IP NETWORK INTERCOM SYSTEM

Interface description

Front

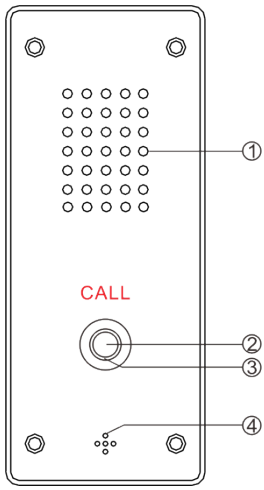

①Speakers
Restore the remote voice.
②Emergency call button
Press this button to call software server pointed terminal
③Status indicator light.
If the connection between intercom terminal and server is abnormal, the indicator will be slowly flash.
The indicator light fast flash within the conversation;
And the indicator is normal on when it`s free.
④Pickup microphone
Collect the local site voice.

Back

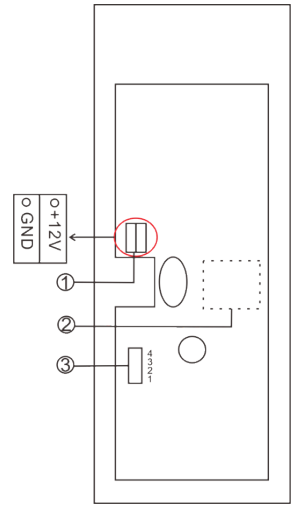

①Power interface:DC12V/3.3A (only be used in independent power supply model)
Note: Pay attention to the direction of the power supply, prohibit the reverse power supply.
②Connect to the panel of the panel, use 568B standard network line.
③Dial switch

Dial switch operation

The operation of the dialing switch as follows:

Panel ID No.	The 1st dial code	The 2nd dial code	The 3rd dial code	The 4th dial code
1#	ON	ON	ON	ON
2#	1	ON	ON	ON
3#	ON	2	ON	ON
4#	1	2	ON	ON
5#	ON	ON	3	ON
6#	1	ON	3	ON

7#	ON	2	3	ON
8#	1	2	3	ON
9#	ON	ON	ON	4
10#	1	ON	ON	4
11#	ON	2	ON	4
12#	1	2	ON	4
13#	ON	ON	3	4
14#	1	ON	3	4
15#	ON	2	3	4
16#	1	2	3	4

For example, the location of the dial code is shown below, and the table shows that the panel is 13# ID .

Note: The intercom panels which connect to the same one IP intercom terminal can`t use the same ID.

Installation diagram

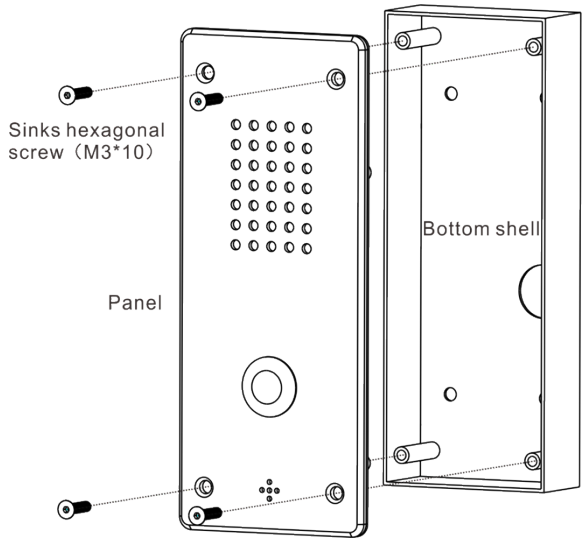

Installation steps:

（1）Use the anti-theft Inner hexagon spanner to demount the Sinks hexagonal screw in the panel and install the wiring.

（2）Fix the bottom shell into the wall according to the illustration method.

（3）Fix the panel on the bottom shell (install the Sinks hexagonal screws back to its original place).

Appearance installation dimension(Unit:mm)

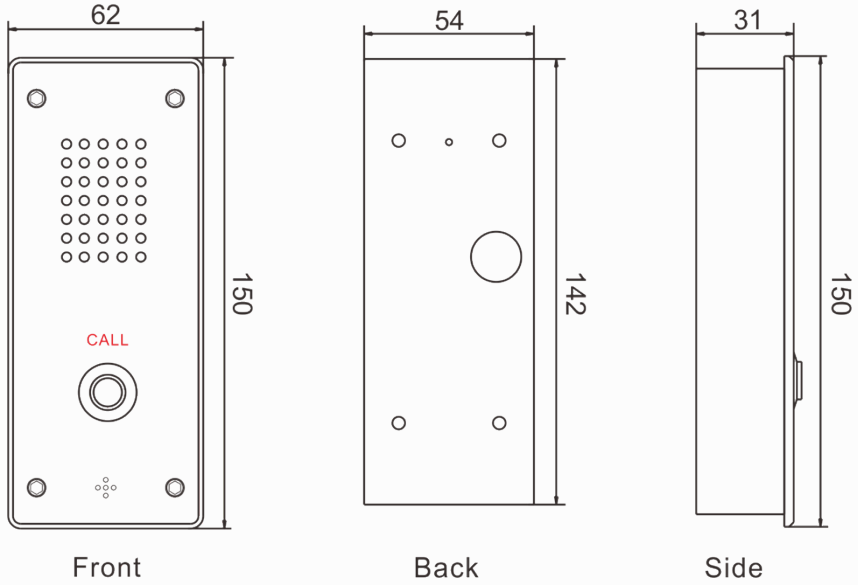

Packing list

Sinks Hexagonal Screw 1 pcs (M3*10)

Inner Hexagon Spanner 1 pcs（2. 0）

Operating instruction board1pcs

Quick Install Manual 1 pcs

Certification 1pcs

SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice

V3. 0B230323