SPON

COLUMN LOUDSPEAKER
Installation Manual

1. Specifications, Functional parts, and Parameters

Input Power	40W(100V)
Rated Impedance	500Ω(20W)/250Ω(40W)
SPL	90±3dB（1M/1W）
Frequency Response	80Hz~20kHz
Speaker Unit	5" Bass *2+1" Treble *1
Mounting Hole Size	2*Φ8mm Distance between holes 379mm
Speaker Installation Method	Bracket Installation
Connection Mode	Cable
Material Science	Aluminium
Size	442*170*148mm
Weight	5.05kg/1PC
Operation Temperature	-25℃ to +55℃
Storage Temperature	-40℃ to +70℃
Relative Humidity	≤95%

2. Three View

Unit：mm

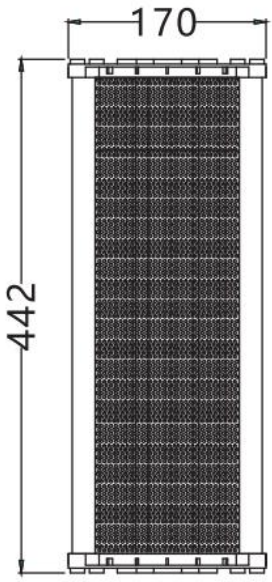

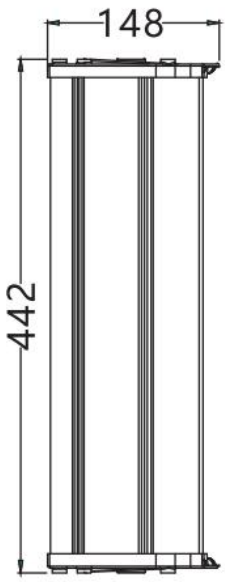

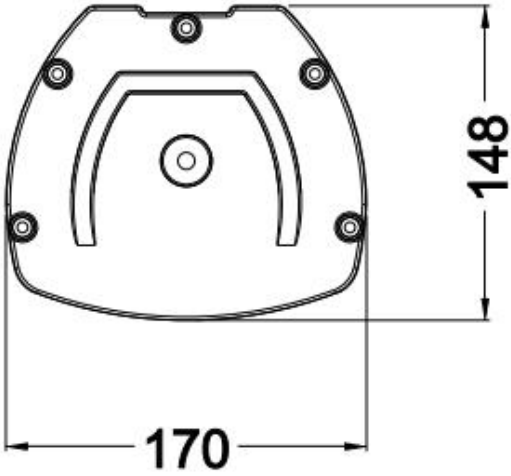

3. Circuit Diagram

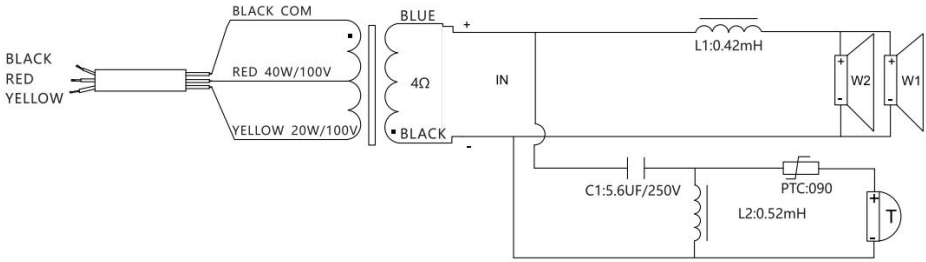

4. Installation Instructions

（1）Drive two expansion screws with a center distance of 379mm into the installation plane.

（2）Fix the mounting bracket on the mounting plane and fasten it with M8 nuts.

（3）Fix the sound column on the mounting bracket with M8 external hexagon screw and gasket.

（4）Connect the audio cable and adjust the required tilt angle.Complete installation.

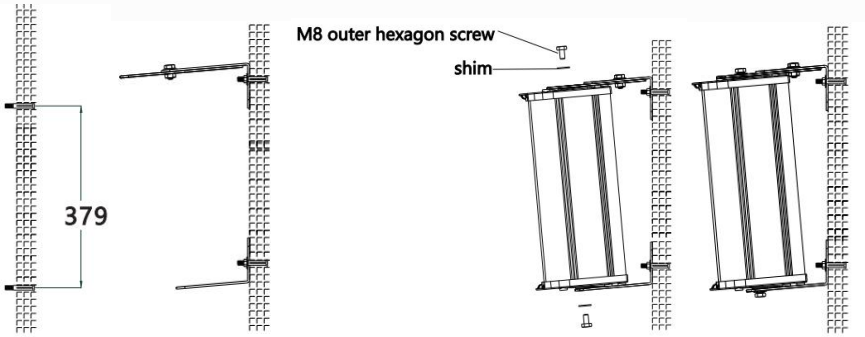

5.Packing list

（1）Column Loudspeaker ---------- 1pcs

（2）I-bracket（174.5*34.5*2.0mm）---------- 1pcs

（3）L-bracket（113.5*64.5*34.5mm）---------- 2pcs

（4）Hexagon screw（M8*20）----------1pcs

（5）Hexagon nut（M8*6.5*13mm）----------1pcs

（6）Shim（Φ8mm*20*1.5mm）----------4pcs

（7）Spring washer（Φ8*12*1.5）----------3pcs

（8）Hexagon screw（8*16mm）----------2pcs

（9）Installation Manual ----------1pcs

（10）Certification ----------1pcs

SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice

Wechat

V1.0B240122